



Blue Pure 211+ Auto

User Manual
Manuel utilisateur
Manual de usuario

Please read this user manual carefully and keep it for future reference.
The latest version of this user manual can be found on www.blueair.com

Note: There may be local variations of these models.

Product name:	Model number:
211+ Auto	3631101000

Contents

Blue Pure 211+ Auto	4
Safety instructions	6
Get started	8
Filters	11
Care and maintenance	15
Disposal and recycling	17
Help and support	17
Warranty information	17
Specifications	18
Regulatory information	19

 
Blue Pure 211+ Auto

The air purifier has a pre-filter and a HEPASilent™ main filter to purify air. It has control functions and a built-in sensor.

The air purifier is mainly composed of a motor, a fan and filters. The air purifier removes contaminants from the air in a room to improve indoor air quality. You can change the air purifier settings at any time, using the control panel on the air purifier.

Recommendations for best performance

- Use the air purifier in a room that does not exceed the room size recommendation.
- Place the air purifier in a location where air can circulate freely in, out and around the air purifier.
- Do not place the air purifier closer than 4"/10cm to another object.
- During operation, keep doors and windows in the room with the air purifier closed.
- Only use genuine Blueair filters.
- Change the main filter when the filter replacement indicator appears on the control panel.
- Follow the maintenance instructions in this user manual.

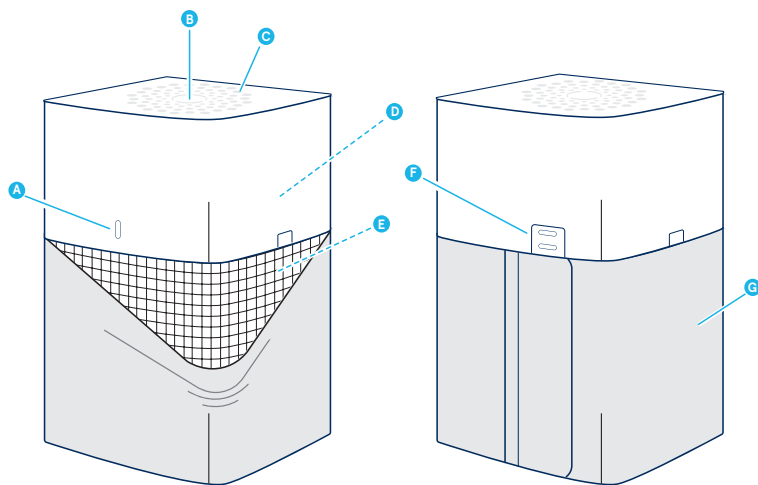

A Air quality indicator

B Touch button

C Air outlet

D Fan and motor

E Main filter

F Air quality sensor

G Pre-filter

H Power cable (not in picture)

I User Manual (not in picture)

Safety instructions

Blue Pure 211+ Auto air purifier is an electrical appliance for indoor use only, take the necessary precautions to reduce the risk of fire, electric shock or injury.

 
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Supervise children to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Always disconnect the appliance from the power supply before maintenance.
- Do not attempt to open or service the appliance yourself. Service must be done by the manufacturer, service agent or similarly qualified personnel using only original Blueair spare parts.
- Ensure that the power cable and the power plug are not at risk of getting damaged. To avoid hazard, a damaged power cable must always be replaced by the manufacturer, service agent or similarly qualified person.
- If the appliance is damaged or malfunctions, turn it off, disconnect it from the power supply and contact Blueair.
- The power plug must be firmly inserted in the power socket.
- When disconnecting the unit from the power supply, do not pull on the power cord, pull on the power plug.
- Use the power cable provided with your Blueair air purifier to plug directly and firmly into an appropriate, electrical outlet.

- Do not use an extension cord or a power strip. Refer to the rating label on your appliance.
- Do not alter the power plug in any way. If the plug does not fit into the outlet, contact qualified personnel to install the proper outlet.
- Do not use the included power cord for anything else but the appliance.
- Do not allow objects to enter or block the air inlets and air outlets as this can cause electric shock or damage the appliance.
- Do not place any objects on top of or directly against the appliance.
- Do not sit on, stand, climb onto or hang from the appliance.
- Keep the appliance, including the power cable, at a safe distance from heated surfaces and open fire.
- Keep the appliance and power plug away from water and other liquids.
- Keep the appliance and power plug away from chemicals such as pesticides and deodorants.
- Place the appliance on the floor. The appliance must be placed on a stable surface.
- Do not use the appliance outdoors or in wet environments such as bathrooms, laundry rooms or pool areas.

Get started


Step 1

Plug the power cable into a wall outlet.

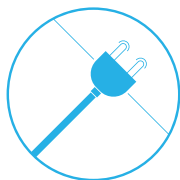

Step 2

 Press the button to turn the air purifier on and adjust the fan speed mode.

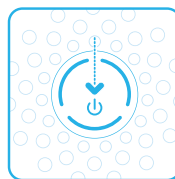

On/Off and fan speed controls

Available settings: Auto, Night, Everyday, Boost and Off.

The indicator lights on the touch button indicate the selected fan speed. The lights automatically dim down completely 5 seconds after pressing the touch button, indicating a deactivated fan speed control mode. Press the touch button once to reactivate on/off and fan speed control. The indicator lights light up and you can adjust the fan speed mode again.

Autostart

The autostart feature automatically restarts the air purifier at the last set speed if it has been unplugged, used with a power switch timer, or if a power failure occurs.

Auto mode

In auto mode the air purifier automatically controls the airflow based on air quality information from the sensor.

On/Auto mode



Press once to turn the unit On and to set it to Auto mode.

Night mode



Press twice to set to Night mode (low fan speed).
All lights on the unit dim down after 5 seconds.

Everyday mode



Press three times to set to Everyday mode (medium fan speed).

Boost mode



Press four times to set to Boost mode (high fan speed).

Off



Press five times to turn the unit Off.

Air quality information

The air quality levels for particulate matter (PM) are indicated using a color scale on the air quality indicator. The air quality indicator is completely dimmed in Night mode.

PM2.5, Particulate matter, particles with diameter of size 2.5 micrometers or less.

Air quality level (PM 2.5)



Polluted



Moderate



Good

Filters

The air purifier is delivered with a fabric pre-filter and a main filter. The filters purify the air from both particles and gases. For best performance, clean the pre-filter regularly and change the main filter when the air purifier indicates filter change. To find the right main filter for your air purifier, use the Blueair app or visit www.blueair.com. The model number of your air purifier can be found on the rating label on the air purifier.

Note: Using a fabric pre-filter is optional.

Important! Always turn off and disconnect the appliance from the power supply before changing filters, cleaning or carrying out maintenance procedures.

Blueair filter subscription program

Use the Blueair app or visit www.blueair.com to sign up for the Blueair filter subscription program.

Button control functions

 
Change filter

When the indicator light turns red (after 6 months of operation) you should change the main filter.



Filter replacement indicator

Press the button down for 7 seconds to reset the filter replacement indicator.

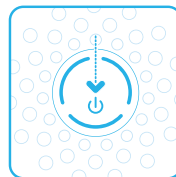


Clean and change the pre-filter

For best performance, clean the pre-filter regularly. Vacuum the exterior of the fabric pre-filter with a soft brush attachment to remove dust. If the pre-filter requires a deeper clean, wash it in the washing machine, according to instructions on the pre-filter's label.

Important! Press the Velcro strips together on the pre-filter before machine wash.


Step 1

 Turn the unit off and unplug it.

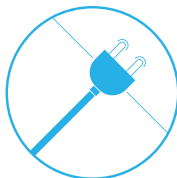


Step 3

 Remove the top part from the unit.

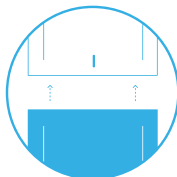


Step 5

 Wash the pre-filter in the washing machine, according to instructions on the pre-filter's label.

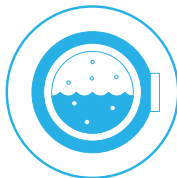


Step 7

 Place the top back onto the unit and press until you hear a click.

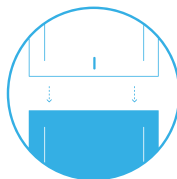


Step 2

 Gently press the buttons on both sides of the unit simultaneously.

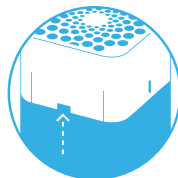


Step 4

 Open the pre-filter panel and remove the pre-filter.

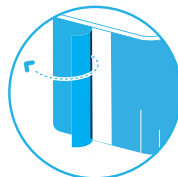


Step 6

 Place the pre-filter back onto the unit. Adjust the pre-filter and the panel to hide the power cord in the back.

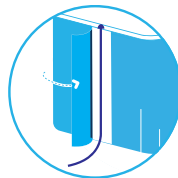

Step 8

 Plug in the unit.

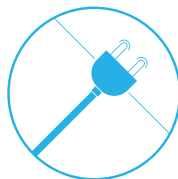

Change the main filter

When changing the filter, vacuum any dust that may have accumulated inside the unit.

Important! Use only genuine Blueair filters suitable for the model to ensure proper function and performance of the air purifier, and to qualify for full warranty coverage.

 
Step 1

When the indicator light glows red, it's time to change the main filter.




Step 2

Turn the unit off and unplug it.

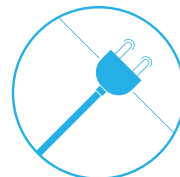


Step 3

 Gently press the buttons on both sides of the unit simultaneously.

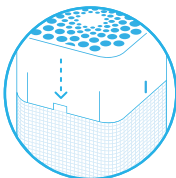


Step 4

 Remove the top part from the unit.

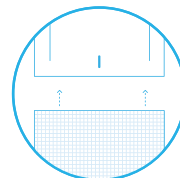


Step 5

 Remove the old main filter from the unit. Unfold the new main filter and insert into the unit.

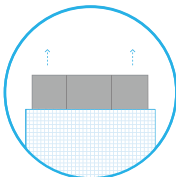


Step 6

 Place the top part onto the bottom part of the unit. Firmly press the top part onto the metal filter frame until you hear a click.

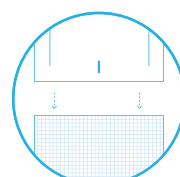

Step 7

 Plug in the unit.

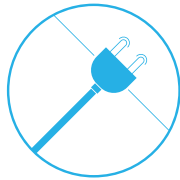**Step 8**

Press the touch button for a duration of 7 seconds to reset the filter replacement timer. This lets the air purifier know that you have changed the filter. The indicator light flashes for 4 seconds, and then changes from red to white.



Care and maintenance

General

- Disconnect the air purifier from the power supply before maintenance.
- Do not allow foreign objects to enter the air inlets or air outlets. This may cause electric shock or damage the air purifier.
- Never clean with gasoline, chemical solvents or corrosive materials as these agents may damage the air purifier.
- Make sure the air purifier is completely dry before connecting it to power.
- Do not wash the main filter. The main filter is not washable or reusable.

Cleaning

- Wash the pre-filter according to the instructions on the pre-filter's label or vacuum the pre-filter with a soft brush attachment.
- Wipe the exterior of the air purifier with a soft, clean, damp cloth.
- Clean and check the power cable and power plug for wear or damages.
- Clean the sensor when changing the main filter.

 
Clean the air quality sensor

The inlet for the air quality sensor is located at the back of the air purifier.

Important! Do not use fingers or any unrecommended objects to clean inside the sensor inlet.


Step 1

Turn the unit off and unplug it.

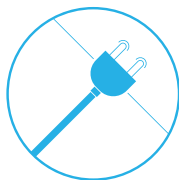


Step 2

 Gently press the buttons on both sides of the unit simultaneously.

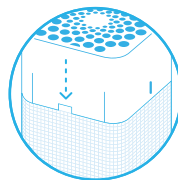


Step 3

 Remove the top part from the unit.

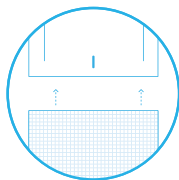

Step 4

 Press the button on the inside of the unit to open the lid covering the sensor and remove the lid.

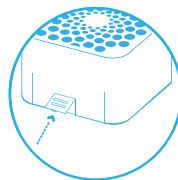


Step 5

Using circular motions, gently clean the sensor with a cotton swab, and attach the sensor lid.




Step 6

 Place the top part onto the bottom part of the unit. Firmly press the top part onto the metal filter frame until you hear a click.

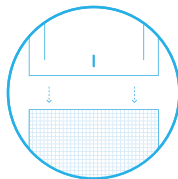

Step 7

 Plug in the unit.

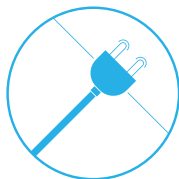

Disposal and recycling

This air purifier should be disposed or recycled as electrical waste and the filter may be recycled as plastic. If you have questions regarding the disposal and recycling of this air purifier, please contact your local recycling facility for availability or Blueair dealer and ask for the correct method of recycling.

Help and support

If you have questions about your product, please visit www.blueair.com or contact your local Blueair retailer.

To contact Blueair for personalized support, please visit www.blueair.com/customer-support

Warranty information

The Blueair Limited Warranty applies only if the air purifier is installed, used and maintained according to the instructions in this manual.

For warranty conditions, please visit www.blueair.com/warranty

Warranty and returns

If you purchased the air purifier at one of our authorized retailers, please contact the same store to request assistance.

Specifications

Blue Pure 211+ Auto	
Input Power, Frequency	120VAC, 60Hz
Power consumption/ Rated input power	4-38W
Sound level (min/max) ¹	23-56 dB(A)
Recommended room size ²	550 ft² (51 m²)
CADR Smoke ²	353 cfm (600 m³/h)
CADR Dust ²	347 cfm (590 m³/h)
CADR Pollen ²	380 cfm (650 m³/h)

¹ Sound pressure according to GB/T18801 and GB4214.1
² According to ANSI/AHAM AC-1-2019. Tested without pre-filter.

Regulatory information

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.