

LIGHT-TO-RISE



SLEEP TRAINER, SOUND MACHINE, AND NIGHT LIGHT
MONITOR DE SUEÑO, MÁQUINA DE RUIDO Y LUZ DE NOCHE
ENTRAÎNEUR DE SOMMEIL, MACHINE À SONS ET VEILLEUSE
INSTRUTOR DE SONO, MÁQUINA DE SOM E LUZ NOTURNA
ALLENATORE DEL SONNO, MACCHINA DEL SUONO E LUCE NOTTURNA
SCHLAFTRAINER, KLANGERÄT UND NACHTLICHT
スリープトレーナー、サウンドマシン、夜用ライト
睡眠训练器、声机和夜灯



TABLE OF CONTENTS

English	Español	Française	Português
1 Button Overview	12 Visión general de los botones	23 Aperçu des boutons	34 Visão Geral dos Botões
2 Display Overview	13 Visión general de la pantalla	24 Aperçu de l'affichage	35 Visão Geral do Mostrador
3 Set Clock	14 Ajustar el reloj	25 Régler l'horloge	36 Definir Relógio
4 Set Sleep Mode	15 Establecer el modo de suspensión	26 Régler le mode veille	37 Definir Modo de Sono
5 Set Wake Mode	16 Establecer el modo despertador	27 Régler le mode de réveil	38 Definir Modo de Despertar
6 Manual Operation of Night Light	17 Operación manual de la luz nocturna	28 Fonctionnement manuel de la veilleuse	39 Operação Manual da Luz Noturna
7 Manual Operation of Sound	18 Operación manual del sonido	29 Fonctionnement manuel du son	40 Operação Manual do Som
8 To Change Battery	19 Para Cambiar la Pila	30 Pour Changer de Batterie	41 Para Substituir a Bateria
8 Disposal of Batteries	19 Eliminación de las Pilas	30 Mise au Rebut des Piles	41 Eliminação de Pilhas
9 FCC Notice	20 Adviso de la FCC	31 Notification de la FCC	42 Aviso da FCC
10 Warranty	21 Garantía	32 Garantie	43 Garantia
11 UKCA	22 UKCA	33 Évaluation de conformité du Royaume-Uni	44 UKCA
11 Disposal	22 Desecho	33 Élimination	44 Disposição

Italiano	Deutsch	日本語	中文
45 Descrizione dei pulsanti	56 Tasten-Übersicht	67 ボタン概要	78 按钮概述
46 Descrizione del display	57 Display-Übersicht	68 表示概要	79 显示概述
47 Imposta l'orologio	58 Uhrzeit einstellen	69 時計の設定	80 设置时钟
48 Imposta la modalità Sonno	59 Schlafmodus einstellen	70 おやすみモードの設定	81 设置睡眠模式
49 Imposta la modalità Veglia	60 Weckmodus einstellen	71 お目覚めモードの設定	82 设置唤醒模式
50 Funzionamento manuale della luce notturna	61 Manueller Betrieb des Nachtlichts	72 ナイトライトの手動設定	83 小夜灯手动操作
51 Funzionamento manuale dell'audio	62 Manuelle Steuerung des Tons	73 サウンドの手動設定	84 声音手动操作
52 Per Cambiare la Batteria	63 Batterie Wechseln	74 電池交換方法	85 更换电池
52 Smaltimento Delle Batterie	63 Entsorgung der Batterien	74 電池の廃棄方法	85 电池的废弃处置
53 Avviso FCC	64 FCC-Hinweis	75 FCCの通知	86 FCC注意事项
54 Garanzia	65 Garantie	76 保証について	87 保修单
55 UKCA	66 UKCA	77 UKCA	88 UKCA
55 Smaltimento	66 Entsorgung	77 処分	88 处置

BUTTON OVERVIEW

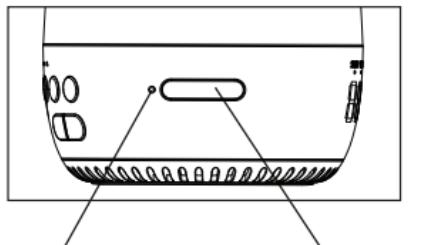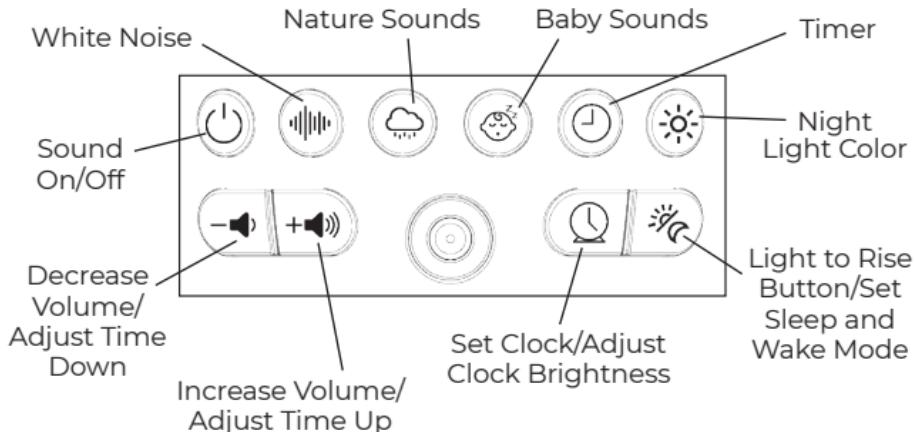

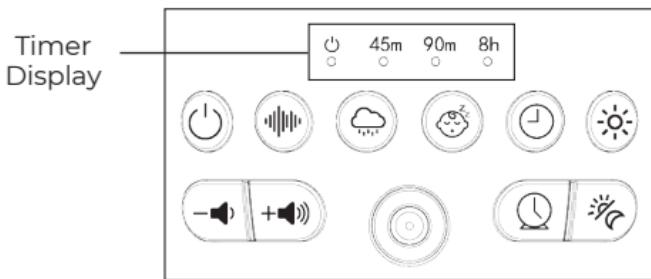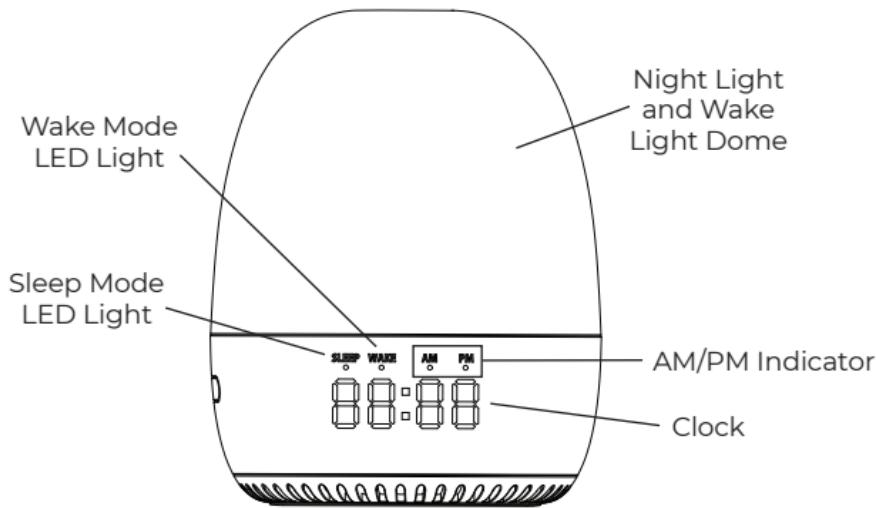


SETUP

1. Connect the Battery

- Pull and remove the battery insulator tab from within the battery compartment
- When this battery is connected, your settings will be maintained when the sound machine is unplugged. The unit must be plugged into an outlet to operate.


1

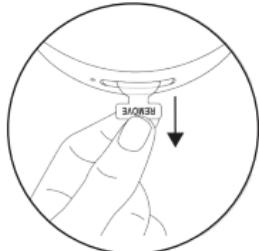

2. Connect to Power

- USB power supply is not included


2

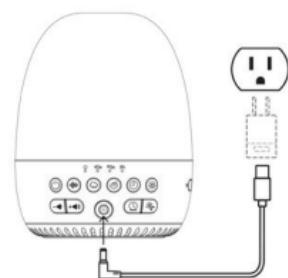

3. Set Clock

- Press Clock button to begin setting hour
- Use +/- buttons to adjust hour. Passing 12 will adjust AM/PM
- Press Clock button to begin setting minute
- Use +/- buttons to adjust minute
- Press Clock button to complete clock set up
- Press and hold Clock button to adjust clock brightness

3

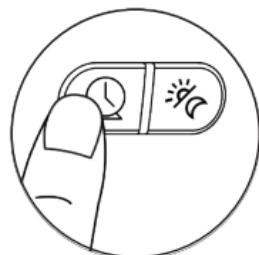

4. Set Sleep Mode

• What is Sleep Mode?



- Sleep Mode is when the night light turns on and automatically turns off one hour later. The light will gradually dim during the last 5 minutes. You can customize the night light color and brightness.

• How to Set Sleep Mode Time and Night Light

- Press Light to Rise Button. The Sleep Mode LED light on the front of the unit will begin to flash
- Use +/- buttons to adjust Sleep hour. Passing 12 will adjust AM/PM
- Press Light to Rise button to begin setting Sleep minute
- Use +/- button to adjust Sleep minute
- Press Night Light Color button to change selected color
- Tap the top of the Night Light dome to change selected brightness
- Press Light to Rise button to save Sleep Mode settings and to begin setting Wake Mode

• How to Turn Sleep Mode On or Off

- The LED Sleep Light on the front of the unit will be illuminated if Sleep Mode is on
- Press and hold the Light to Rise button until the Sleep Mode LED light turns on or off

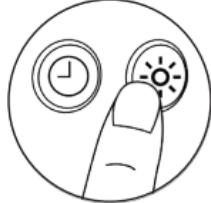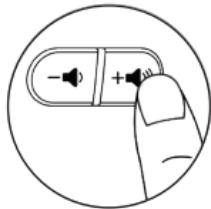

5. Set Wake Mode

- **What is Wake Mode?**

- Wake Mode involves a yellow light coming on 30 minutes before your set Wake Time. The yellow light will start off dim and gradually intensify during the first 5 minutes. At Wake Time, the yellow light will change to green and automatically turn off 1 hour later. You cannot customize the Wake Light color or brightness.


- **How to Set the Wake Mode Light Time**

- After pressing the Light to Rise button to set Sleep Mode, the Wake Mode LED at the front of the unit will begin to flash
- Use +/- buttons to set Wake hour. Passing 12 will adjust AM/PM
- Press Light to Rise button to begin setting Wake minute
- Use +/- buttons to adjust Wake minute
- Press Light to Rise button to save Wake Mode settings



- **How to Turn Wake Mode On or Off**

- The LED Wake Light on the front of the unit will be illuminated if Wake Mode is on
- Press and hold the Light to Rise button until the Wake Mode LED light turns on or off

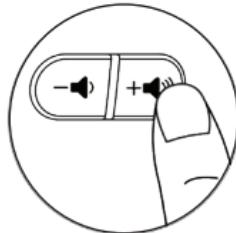

6. Manual Operation of Night Light

- You can choose to manually operate the night light, choose its color, choose its brightness, and set a timer for the night light to turn off
- **To Manually Turn On and Customize Night Light**
 - Tap the top of the Night Light dome to turn on the Night Light
 - Continue tapping the top of the Night Light dome to change selected brightness
 - Press the Night Light color button to change selected color



7. Manual Operation of Sound

- You can manually operate the sound. You can customize sound type, volume, and set a timer for the sound to turn off

• To Manually Operate Sound



- Press the Sound On/Off button to turn the sound on
- Press the White Noise button, Nature Sounds button, or Baby Sounds button to cycle through each category of sounds. A “ding” will indicate when you’ve reached the last sound option
- Increase or decrease the sound volume by pressing the Increase Volume or Decrease Volume button. A “ding” will indicate when you’ve reached the maximum sound volume
- To set a time for the sound to turn off, press the Timer button to cycle through selected timer options



For additional tips, setup information, features, and technical details about Light to Rise, scan the QR code or visit <https://yogasleep.com/light-to-rise>



Sound Selection

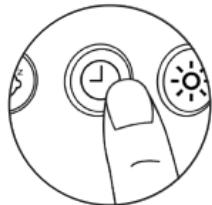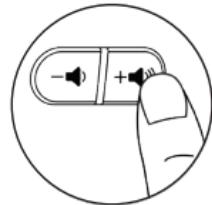

This unit uses a CR2032 lithium coin battery; replace only with a new CR2032 battery.

IMPORTANT: Do not unplug unit while changing battery in order to preserve memory backup feature.



1. Eject the battery by inserting the provided battery removal tool into the hole to the left of the battery holder.
2. Slide out battery holder until it stops and remove original battery.

KEEP OLD BATTERY AWAY FROM CHILDREN AND PETS.

3. Insert new CR2032 battery into the battery holder with the positive side (+) facing upward.
4. Slide battery holder back into unit until closed.

KEEP PROVIDED TOOL AWAY FROM CHILDREN AND PETS.

DISPOSAL OF BATTERIES

The batteries used to power this product are classified as being "waste batteries" in reference to proper disposal of batteries at their end-of-life. DO NOT dispose of the batteries with your normal household trash and waste. DO NOT dispose of the batteries with electronic waste. Many jurisdictions have trash and sanitation departments that have separate policies and avenues for the safe disposal of waste batteries; and if applicable, ensuring environmentally safe and sustainable recycling for the reuse of material resources. Please contact your local trash, waste and sanitation department to learn how to properly dispose of your waste batteries in accordance with your local regulations.

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna
2. Increase the separation between the equipment and receiver
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
4. Consult the dealer or an experienced radio/TV technician for help

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

If you need service (even beyond the warranty period outlined below), PLEASE contact us! (help@yogasleep.com | 1 (800) 999 6962) A live, knowledgeable service team member will be happy to assist you.

We are proud of our sound machines and stand behind our products.

LIMITED ONE-YEAR FACTORY WARRANTY:

Yogasleep warrants its products (with exceptions as indicated below), to the original purchaser, to be free of defects for a period of one year from the date of purchase. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state. This limited warranty covers all parts and/or workmanship against defects or breakages in normal intended use. This limited warranty does not cover damage caused by accidental dropping, rough handling, or misuse of the product; including tampering. Do not alter or tamper with the quality label, or imprinted product information on the bottom or back of the actual sound machine — this will void your warranty.

Our ultimate promise to you is that we do our best to make high quality sound machines. We really do care about your enjoyment of our products. We want to hear from you any time you think our product has disappointed you. Please contact us. We stand behind these products, expect them to last, and will make every reasonable effort to make you happy.

NOTICE FOR AUSTRALIAN CUSTOMERS

The warranty above does not apply to Australian consumers.



PER AUSTRALIAN CONSUMER LAW:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

1. For The UK Market (excluding Northern Ireland), Represented by:

Authorised Rep Compliance Ltd, ARC House, Thurnham, Lancaster,
LA2 0DT, UK.

2. For the EU, EEA, and Northern Ireland markets, Represented by:

Authorised Rep Compliance Ltd., Ground Floor, 71 Lower Baggot Street,
Dublin, D02 P593, Ireland.

DISPOSAL

This product is classified as being “electronic waste” in reference to proper disposal of product at the end-of-life. DO NOT dispose of the unit with your normal household trash and waste. Many jurisdictions have trash and sanitation departments that have separate policies and avenues for the safe disposal of electronic waste to ensure environmentally safe and sustainable recycling for the reuse of material resources. Please contact your local trash, waste and sanitation department to learn how to properly dispose of your electronic waste in accordance to your local regulations.