



## DREAMCENTER

**QUICK SETUP | CONFIGURACIÓN RÁPIDA |  
CONFIGURATION RAPIDE | CONFIGURAÇÃO  
RÁPIDA | CONFIGURAZIONE RAPIDA | SCHNELLE  
EINRICHTUNG | クイックセットアップ | 快速設置**


**1.**

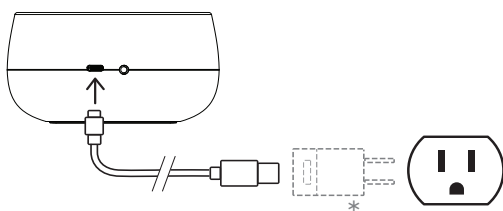

**2.**

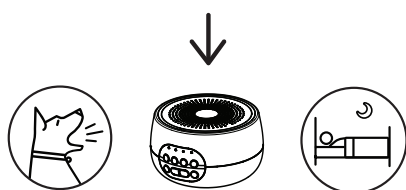

**3.**

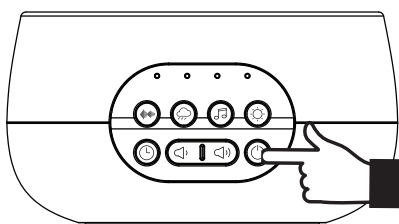

\*USB power supply not included

No incluye la fuente de alimentación USB

Alimentation USB non incluse

Fonte de alimentação USB não incluída


Alimentatore USB non incluso

USB-Netzteil nicht im

Lieferumfang enthalten

USBの電源装置は含まれていません

不包括 USB 电源

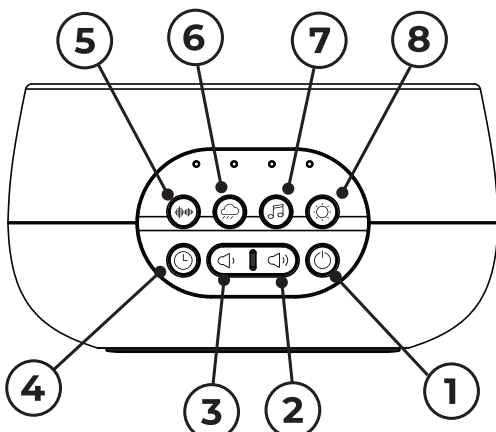

CONTROLS

- 1. POWER ON/OFF
- 2. INCREASE VOLUME
- 3. DECREASE VOLUME
- 4. SELECT TIMER
- 5. WHITE NOISE

- Pink noise 1
- Pink noise 2
- White Noise 1
- White Noise 2
- Brown Noise 1
- Brown Noise 2
- Dohm High
- Deep Fan
- Dohm Low

6. NATURE

- Ocean Surf
- Gentle Surf
- Stream
- Thunderstorm
- Rain
- Birds
- Campfire

7. MUSIC

- Relax
- Calm
- Restore
- Chimes
- Lullaby
- Twinkle Twinkle Little Star
- Happy Child
- Landscape

8. LIGHT

- Quick Press = On/Off
- Press + Hold = Adjust Light Color

WHERE TO PLACE

For sound-masking purposes, the unit is most effective when placed between yourself and the source of noise. For example, in an urban environment, the unit might best be placed by the window to block outside street noise. Perhaps you have a noisy neighbor — in this instance, placement against a shared wall will be the most helpful. If the sounds are within your own household, placing the machine closest to the source of noise disruption will provide the greatest relief. Finally, if the noise is right next to your head, as in the instance of a snoring partner, the unit should be on the nightstand that is located on your side of the bed.

In general, we recommend placing the unit at least three feet (one meter) away from you or your child. This lets the sound fill the space in order to provide the greatest sound-masking benefit and creates a soothing sound environment conducive to sleep, concentration, or privacy.

WARRANTY INFORMATION AND THE YOGASLEEP CUSTOMER SERVICE PROMISE

If you need service (even beyond the warranty period outlined below), PLEASE contact us! (help@yogasleep.com | 1 (800) 999 6962) A live, knowledgeable service team member will be happy to assist you.

We are proud of our sound machines and stand behind our products.

LIMITED ONE-YEAR FACTORY WARRANTY:

Yogasleep warrants its products (with exceptions as indicated below), to the original purchaser, to be free of defects for a period of one year from the date of purchase. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state. This limited warranty covers all parts and/or workmanship against defects or breakages in normal intended use. This limited warranty does not cover damage caused by accidental dropping, rough handling, or misuse of the product; including tampering. Do not alter or tamper with the quality label, or imprinted product information on the bottom or back of the actual sound machine – this will void your warranty.

Our ultimate promise to you is that we do our best to make high-quality sound machines. We really do care about your enjoyment of our products. We want to hear from you any time you think our product has disappointed you. Please contact us. We stand behind these products, expect them to last, and will make every reasonable effort to make you happy.

SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS

- For proper use, we recommend using the provided power supply cable included with this unit.
- When disconnecting the power supply, pull the plug first. Do not pull the cord by itself.
- Never handle the power plug with wet hands, as this could cause fire or electric shock.
- This product is intended for indoor use only.

- Check the product for damage before each use. If there are any signs of damage, discontinue use immediately.
- Refer servicing to qualified personnel only.
- Do not open the housing.
- Do not twist or pinch the power supply cord. If the power supply cord needs to be replaced, contact Yogasleep customer service (information above) to procure a replacement.
- Unplug the unit (and power supply) during lightning storms.
- To avoid damage, never place the unit near radiators, in front of heating vents, or under direct sunlight.

**WARNING :** To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.

The apparatus shall not be exposed to splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

To avoid damage, never place the unit or its battery near radiators. in front of heating vents, under direct sunlight or near water.

DISPOSAL

This product is classified as being “electronic waste” in reference to proper disposal of product at the end-of-life. DO NOT dispose of the unit with your normal household trash and waste. Many jurisdictions have trash and sanitation departments that have separate policies and avenues for the safe disposal of electronic waste to ensure environmentally safe and sustainable recycling for the reuse of material resources. Please contact your local trash, waste and sanitation department to learn how to properly dispose of your electronic waste in accordance to your local regulations.

FCC NOTICE

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful Interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the users authority to operate the equipment.

CONTROLES

- 1. ENCENDIDO/APAGADO
- 2. SUBIR EL VOLUMEN
- 3. BAJAR EL VOLUMEN
- 4. SELECCIONAR TEMPORIZADOR
- 5. RUIDO BLANCO Y SONIDOS DE VENTILADOR

- Ruido Rosa 1
- Ruido Rosa 2
- Ruido Blanco 1
- Ruido Blanco 2
- Ruido Marrón 1
- Ruido Marrón 2
- Dohm Alto
- Ventilador Profundo
- Dohm Bajo

6. SONIDOS DE LA NATURALEZA

- Oleaje del Océano
- Surf Suave
- Corriente
- Tormenta Eléctrica
- Lluvia
- Pájaros
- Hoguera

7. MÚSICA

- Relajarse
- La Calma
- Restaurer
- Campanas
- Canción de Cuna
- Estrellita Dónde Estás
- Niño Feliz
- Paisaje

8. LUZ

- Pulsación Rápida = Encendido/ Apagado