

SoundAsleep® Bluetooth Receiver User Manual

SAFETY PRECAUTIONS


1. Please do not turn the volume up too loud. Recommended volume: 60%.
2. Please keep the SoundAsleep® Bluetooth receiver out of the reach of children.
3. It is an electrical device – please keep away from water.
4. If you feel discomfort, irritation or other undesirable reactions when using the SoundAsleep® Bluetooth receiver, please stop using it immediately.
5. Avoid storing or using the SoundAsleep® Bluetooth receiver in an environment where the temperature is lower than -15°C or higher than 55°C.

SoundAsleep® Bluetooth receiver OVERVIEW

Package Contents

One SoundAsleep® Bluetooth receiver

One product manual

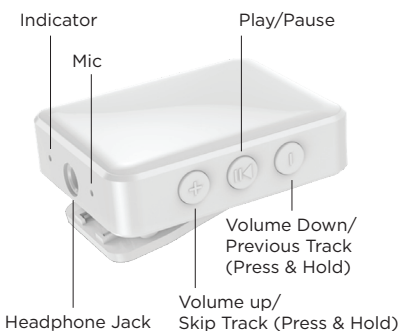

Charging and battery

1. Please turn off the SoundAsleep® Bluetooth receiver before charging.
2. Plug the charging cable into the SoundAsleep® Bluetooth receiver charging interface, and plug the other end of the USB port into the charger or other charging device. During that time, the SoundAsleep® Bluetooth receiver starts to charge. The red light will be on while charging.
3. It will take about 1.5–2 hours to fully charge the SoundAsleep® Bluetooth receiver. The blue light comes on when fully charged. Fast charging is prohibited.
4. In case of failure to turn on, charge for 20 minutes first before using it.

Warning: You must use the matching charging cable to charge the SoundAsleep® Bluetooth receiver. Using an unmatched charging cable may damage the phone. If using DC voltage, it must be 5V, electric current is greater than 100mA(5V/220mA).

This SoundAsleep® Bluetooth receiver uses a built-in non-removable rechargeable battery. To avoid damage, do not try to remove the battery.

SoundAsleep® Bluetooth Receiver User Manual

Turn on

Press and hold the function button for about 3 seconds until the blue light turns on and the headphone emits a “turn on” prompt sound.

Turn off

Press and hold the multi-function button for 3 seconds until the red light flashes and then goes out, the headphone will emit a “turn off” prompt

SoundAsleep® Bluetooth receiver matching steps

1. Please keep the distance between the SoundAsleep® Bluetooth receiver and the mobile phone (or other device used for connection) within 1 metre, the closer the better.
2. Press and hold the multi-function button of the SoundAsleep® Bluetooth receiver for 3 seconds to turn on, and the red and blue lights will flickers to enter the matching mode.
3. Turn on the Bluetooth search function of the mobile phone or other connected devices, search for “X1”, and click “X1” to connect.

To disconnect the SoundAsleep® Bluetooth receiver from the mobile phone's Bluetooth connection, please use one of the following methods:

1. Turn off the phone's Bluetooth function. Press and hold the multi-function button of the SoundAsleep® Bluetooth receiver until the red light goes out – the SoundAsleep® Bluetooth receiver will automatically shut down.
2. Move the SoundAsleep® Bluetooth receiver to a location 20 metres or more away from the phone.

To reconnect the SoundAsleep® Bluetooth receiver to the phone:

1. Please keep the distance between the SoundAsleep® Bluetooth receiver and the mobile phone (or other device used for connection) within 1 metre, the closer the better.
2. Turn on the SoundAsleep® Bluetooth receiver – it will enter the reconnect mode, and the blue light flickers.
3. At the same time, turn on the Bluetooth search function of the mobile phone or other devices that need to be connected, and the SoundAsleep® Bluetooth receiver will automatically reconnect with the last connected device.

BASIC OPERATION

Increase volume

Press the ‘volume +’ button in the playing state.

Reduce volume

Press the ‘volume –’ button in the playing state.

Play

In the paused state, tap the power button to start playing.

Play previous song:

Press and hold the 'volume -' button in the playing state.

Play next song

Press and hold the 'volume +' button in the playing state.

Do not disturb

To avoid phone calls, put your phone in do not disturb mode.

Answer a call

When a call comes in, press the multi-function button.

End a call

During a call, press the power button.

Last number redial

Double-click the power button.

Reject call

Press and hold the power button for 2 seconds.

Voice assistant

In standby mode, press and hold the multi-function button for 2 seconds to open the voice assistant on the mobile phone, for example IOS Siri.

Matching two phones

Phone One

When the SoundAsleep® sound bar is off, press and hold the power button to enter the matching mode.

Turn on the Bluetooth of the first mobile phone, search for the SoundAsleep® Bluetooth receiver, and click connect.

After the matching is successful, turn off the SoundAsleep® Bluetooth receiver and turn off the Bluetooth of the phone.

Phone Two

Turn on the SoundAsleep® Bluetooth receiver again and enter the matching mode, turn on the second phone, and repeat the above operation.

After the second phone is successfully connected, turn on the Bluetooth of the first phone again, find the SoundAsleep® Bluetooth receiver, and click connect.

FREQUENTLY ASKED QUESTIONS

Q. Why can't the SoundAsleep® Bluetooth receiver be matched with the mobile phone?

A. Please check whether the SoundAsleep® Bluetooth receiver is in matching or connection mode, and check whether the Bluetooth search function of the mobile phone is turned on.

Q. Why won't the SoundAsleep® Bluetooth receiver start?

A. Please check the battery level of the SoundAsleep® Bluetooth receiver.

SoundAsleep® Bluetooth Receiver User Manual

Q. Can you replace the battery?

A. No, this SoundAsleep® Bluetooth receiver uses a non-removable lithium polymer battery.

Q. Can I use the SoundAsleep® Bluetooth receiver while driving?

A. No, do not use it while driving.

Q. Why is the SoundAsleep® Bluetooth receiver disconnected from the mobile phone at 10 metres?

A. Because Bluetooth is a wireless technology, it is very sensitive to the SoundAsleep® Bluetooth receiver and the objects connected to the device. Please check whether there is metal or other objects that affect the connection in the connection range.

Q. Why do I hear different sounds after the SoundAsleep® Bluetooth receiver is connected to a computer or mobile phone?

A. Please check whether the computer's output channel is a Bluetooth audio device and whether the computer's Bluetooth supports the A2DP protocol, and check the computer/mobile phone volume.

Q. After the SoundAsleep® Bluetooth receiver is connected to the mobile phone, can it be used to control the applications on the mobile phone?

A. The software settings of the device application may be different, so the functions of individual applications do not support the operation of the SoundAsleep® sound bar.

TECHNICAL SPECIFICATIONS

Version: 5.0

Version: AB5335B-V5.0

Supporting agreement: A2DP AVCTP
AVDTP AVRCP HFP SPP HID

Bluetooth range: ≥ 10metre

Battery capacity: 150mAh

Charging time: 1.5-2h

Standby time: >480h

Music playing time: Approximately 10
hours at 60% volume

Dimension: length 40mm x width 32mm x
height 10.5mm

Power-on default mode: enter pairing
mode (connect back)

Charging voltage/Current 5V/70mA

Material: PC+ABS

Technical specifications are subject to
change without notice.

Sleep Corp Pty Ltd | PH: 1300 857 123
www.sleepcorp.com.au
hello@sleepcorp.com.au

SLEEP CORP®