



Change the filter


1. Screw off the bottom cap

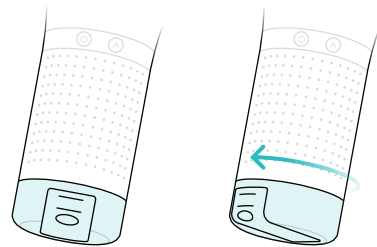

2. Take out the old filter and insert the new one.

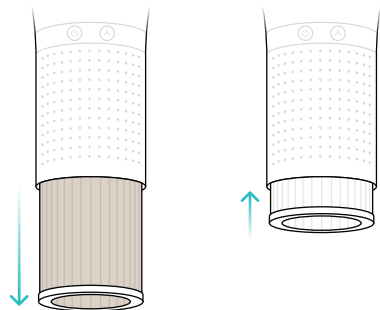

3. Screw the bottom cap back in

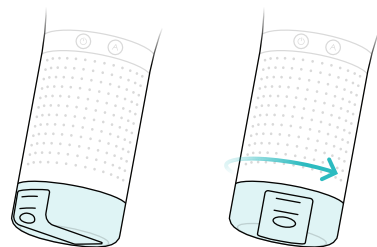

Questions or feedback?

support@hellowynd.com

Warranty details:

hellowynd.com/warranty

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Other Statement:

The power adapter and charging cable provided are supplemental free items and are not part of the Wynd product purchased.

ISED Statement:

This device complies with ISED licence-exempt RSS standard(s). Operation is subject

to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ISED Radiation Exposure Statement:

This equipment complies with ISED RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet appareil est conforme aux limites d'exposition de rayonnement RF ISED établies pour un environnement non contrôlé.

Cet émetteur ne doit pas être co-implanté ou fonctionner en conjonction avec toute autre antenne ou transmetteur


Welcome to Wynd

Get the Wynd app


Get detailed info about your air quality and unlock important Wynd device updates by going here on your phone or tablet:
hellowynd.com/app

Turn Wynd on and off


Tap the power button on the purifier to turn it on and off:

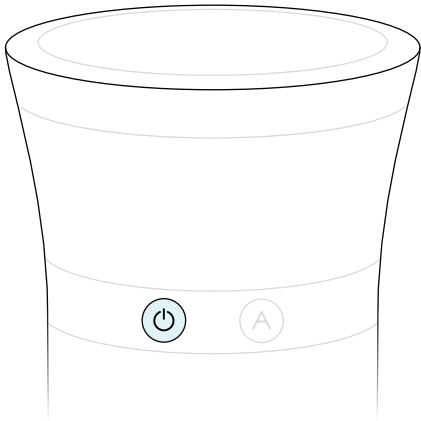

Tap the button on the side of the tracker to turn it on and off:

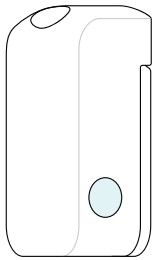

Adjust airflow

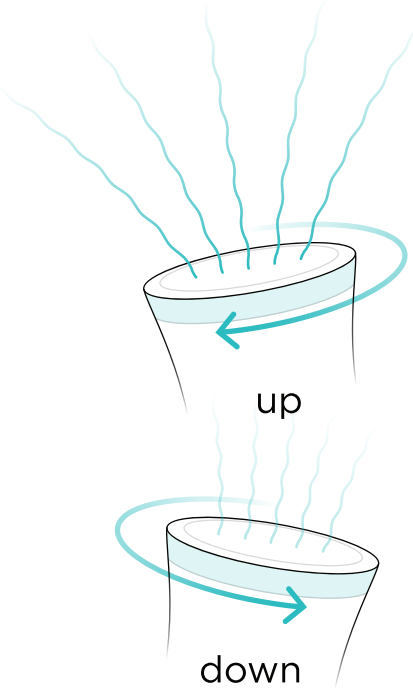


Or, sit back and turn on Auto mode by pressing **A**

This automatically adjusts the purification level based on the air quality.


Monitor your air

The Wynd tracker senses the air quality.




Leave it docked, to charge while it tracks the air...

Or take it out to monitor air quality on the go.

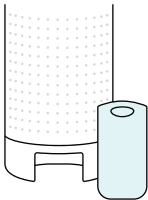

The Tracker's light color indicates air quality. To see detailed info about these colors, visit hellowynd.com/instructions.




GOOD


HAZADROUS

Use the kickstand

1. Snap the kickstand into Wynd's attachment points

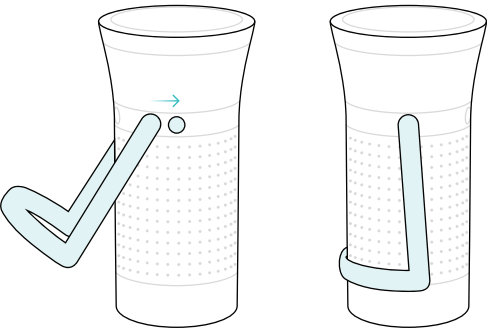

2. Expand the kickstand to funnel clean air at an angle

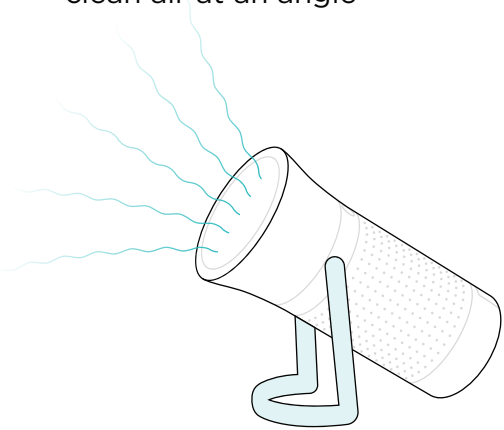


Continued →

Get the Wynd app

Get detailed info about your air quality and unlock important tracker updates by going here on your phone or tablet:
hellowynd.com/app


Turn it on and off

Tap the button on the side of the tracker to turn it on and off.

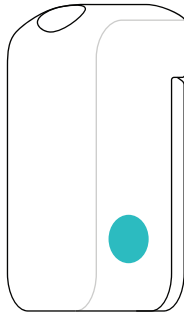

Light isn't coming on, or it just blinks? Charge it. Follow the charging instructions over there →

Charge it

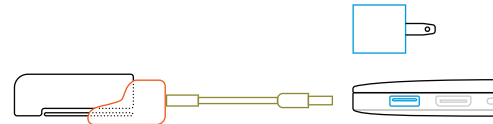


Insert tracker
into charging
dock

Connect
USB cable

Plug into
USB port

Monitor your air quality

The tracker's light color indicates air quality:

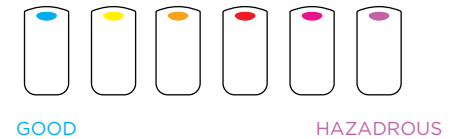

To see more detailed info, visit
hellowynd.com/instructions