

BLUEAIR 203



Blueair's patented HEPASilent™ technology combines the best features of electrostatic and mechanical filter technology to enable the delivery of more clean air at a faster rate with less noise. Phenomenally low power usage minimizes energy consumption. Plus Blueair air purifiers actually reduce the levels of ozone in indoor air.


It's great in small areas and workspaces to get rid of pesky airborne allergens, such as pollen, dust, smoke, mold spores, pet dander and other impurities. Blueair 203 packs a complete, high-performance air purifier into a beautifully compact design that's incredibly quiet.

At a glance

- Ideal for small rooms or workspaces 16-20 m²
- 99.97% filtration efficiency
- Energy Star® qualified
- Includes filter replacement indicator

How it works

Air is drawn into the unit via an ultra-quiet fan. Airborne particles pass through a negative ion chamber and are thus charged to ensure that they cling and do not pass through Blueair's progressive three-stage filter. Cleaned air that is free of impurities is recirculated into the room.

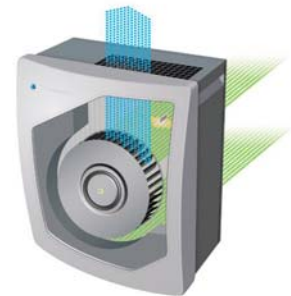

Designed for life



Energy efficient



Independently certified



BLUEAIR 203 MODEL PRODUCT SPECIFICATIONS

DIMENSIONS

- Height 533 mm
- Width 432 mm
- Depth 241 mm

WEIGHT

- Weight 11 kg
- Room size 16 - 20 m²

CLEAN AIR DELIVERY RATE (CADR)

- Smoke: 195 m³/h
- Dust: 195 m³/h
- Pollen: 195 m³/h

AIRFLOW RATE

- 9.6 - 16.6 m³/h

AIR EXCHANGES PER HOUR: 5 per hour

POWER USAGE: 20 to 80 watts

NOISE LEVEL: 32 to 56 dB (A)

FILTER LIFE: Six months (running time)

WARRANTY:

- Domestic use: 5 years upon product/warranty registration with Distributor
- Commercial use: 2 years upon product/warranty registration with Distributor