


coway

Coway Air Purifier AP-1018F

- •This product is for domestic use only. It cannot be used in an overseas country where the power voltage is different.
- •Warranty card is included in this user's manual.
- •Read and save these instructions.

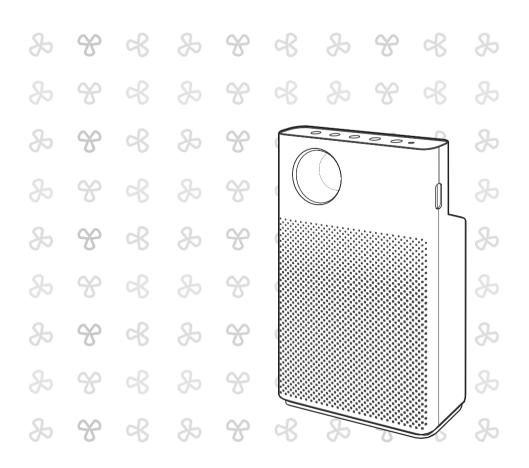

FEATURES

1. Smart eco

The smart power saving feature automatically switches to smart eco mode if the purifier does not run for a set period of time.

- Enters standby mode when the air stays clean for at least 10 minutes.

2. Excellent air purification ability

A powerful HEPA filter removes fine dust from indoor air as part of an optimized filter system that quickly eliminates contamination.

3. Detachable air vent grille

Detachable vent grilles are installed on the purifier top for easier, more effective cleaning than in other products with fixed covers.

4. Elegant design


A slim, neat design makes this purifier blend in anywhere.











DEAR CUSTOMERS

Thank you for using the **Coway air purifier.**

Please be sure to read this instruction manual to use and maintain your air purifier correctly. If you experience any problems during use, you can refer to this instruction manual to resolve them. This user manual contains the product warranty, so please store it safely.

FOR INFORMATION

03 | SAFETY INFORMATION Danger Warning Caution 07 | PARTS NAME

09 AIR PURIFICATION

PROCESS

MAINTENANCE

15 CLEANING METHOD Produc t Filter |17| FILTER **REPLACEMENT**

HOW TO USE

- 10 BEFORE USE How to install filter
 - INDICATORS AND BUTTONS |11|
 - 131 HOW TO USE
 - 141 ADJUST PARTICLE SENSOR

OTHER

- **TROUBLE SHOOTING** 191
- **PRODUCT SPECIFICATION** 20
- WARRANTY 21

FEATURES

- Keep your instruction manual in a readily accessible or visible place.-

SAFETY INFORMATION

The following information is for user safety that should be observed.

It is to ensure user safety and prevent property damage. Please read the precautions carefully and use the product correctly.

for 220 V - 240 V use

for 120 V use only

DANGER : Failing to follow the precautions below may result in serious injury or even death.

- Do not use damaged power plugs or loose sockets.
- The power plug must be plugged into 220 V 240 V \sim 50 Hz / 60 Hz.
- Do not pull on the power cord to move the device.
- Do not touch the power plug with wet hands.
- To avoid damaging or warping the power cord, do not use excessive force to bend the power cord or put heavy objects on top of it.
- Do not repeatedly connect and disconnect the power plug.
- If water enters the power supply, unplug the power and completely dry before using again.
- Be sure to unplug the power during product repair, maintenance or part replacement.
- If the power plug's pins or contact area become covered in dust or water, wipe them thoroughly.
- Do not plug several electric appliances into one socket, and use only a dedicated socket.
- Unplug the power when not used for a long time.
- Do not carelessly connect or tamper with the power cord.
- If the power cord is damaged, do not replace it yourself. Contact a service center to have it replaced.
- Do not install near electric heaters.
- Do not put on top of electric products like heaters or televisions.

- Do not install in places with a lot of humidity or dust or places where water (rainwater) splashes.
- Do not use or store combustible gases or flammable materials near this product.
- If there is a strange sound, burning smell, or smoke from the device, immediately unplug the power plug and contact a service center.
- Never immerse the product in water.
- Do not spray flammable materials such as insecticides or air fresheners on the intake.
- Do not open, repair, or modify the device yourself.
- Do not put bowls of water, chemicals, food, small metal objects, or flammable materials on top of this product.
- Unplug the power before cleaning.
- If the purifier falls over and gets wet during use, A/S maintenance is required before further use.
- Do not spray water directly on the device or use benzene, thinners, etc. to wipe it during cleaning.
- · Do not insert sharp objects such as picks into the air quality sensor.
- Do not put fingers or foreign matter (pins, sticks, coins, etc.) into the vent.
- · Do not let children hang from or climb on the purifier.
- Be careful that children do not put their hands in the vent.
- Replace the filter with a new one when the time comes.
- · Do not spray water directly on the purifier.

SAFETY INFORMATION

▲ WARNING : Failing to follow the precautions below may result in considerable physical injury or property damage.

- Do not unplug by pulling on the power cord.
- Plug into a power socket connected to an earth leakage circuit breaker (current sensitivity 30 mA or less).
- If extending the power cord, only use with sockets and cords of 250V/15A and use by itself.
- Do not use in baths, showers, swimming pools, or other areas where the purifier may be in direct contact with water.

CAUTION : Failing to follow the precautions below may result in slight physical injury or property damage.

- Do not unplug the power or move the purifier while it is operating.
- If unusual sound, odor, or smoke comes from the purifier, immediately unplug the power and call our service center.
- Do not install on a slope.
- Do not excessively impact or use excessive force on this product.
- Use at least 20 cm away from walls or other objects on each side.
- Install the purifier in a place where it is not blocked on any side so air can circulate well.
- Install at least 2 m away from TVs and other electronic items.
- Do not use in BBQ or other restaurants where odor, smoke, or oil may occur.
- Do not use in direct sunlight.
- Do not install in a high place.
- Do not use extreme force on the purifier.


- Do not push or lean on the purifier. The purifier may fall over.
- Do not use for a long time in places that are sealed or where children, the elderly, or sick people are.
- Do not block the vent with laundry or curtains.
- Remove dust from the pre-filter with a vacuum cleaner or water.
- Periodically wash the pre-filter and dry it well in a shady place with good ventilation.
- People with physical, sensory, or mental impairment as well as children must be supervised or guided while using the device.
- It is advisable to supervise children so they do not play with the device.
- When moving the purifier, lift the top as well with your thumb as in the photo. The purifier may fall over.




READ AND SAVE THESE INSTRUCTIONS

PARTS NAME

Rear / Front

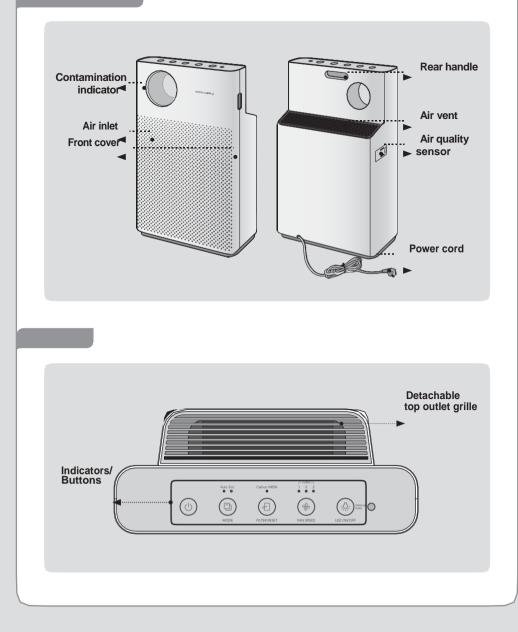

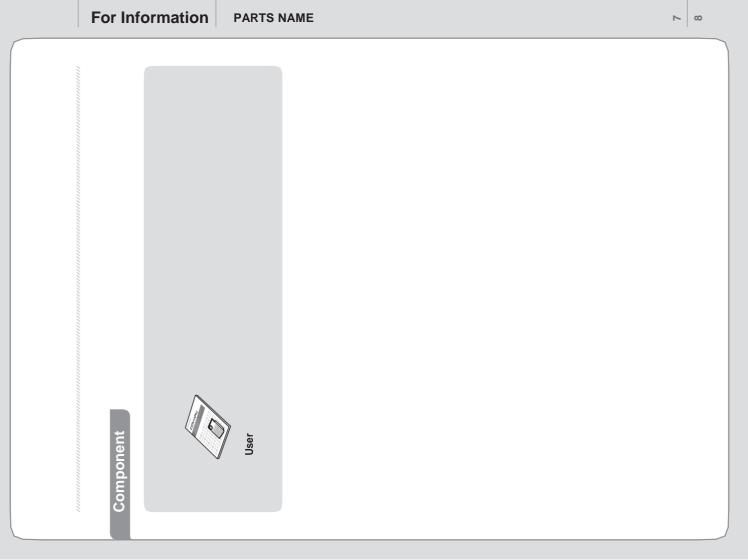

AIR PURIFICATION PROCESS

Pre-filter


Removes large dust and mold, hair, pet fur, etc.

Deodorization filter

The granular activated carbon deodorizing filter effectively removes odors including food smells and unpleasant household odors and harmful gases.

HEPA filter

The high-performance synthetic HEPA filter is excellent at removing cigarette smoke and fine dust.

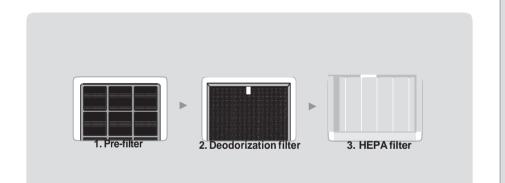

BEFORE USE

Please check before u



The product is for 220 V – 240 V~ 50 Hz / 60 Hz only. Make sure to connect the power plug to a grounded electric outlet (220 V – 240 V~ 50 Hz / 60 Hz) dedicated to the product.



How to install filter

- Be sure to install the filter after removing the plastic packaging.
- Only use it indoors.
- When not in use, remove the power plug from the socket.
- During filter assembly, check the front of the filters.
- ▶ Filter assembly order : HEPA filter → Deodorizing filter → Pre-filter

1. Open the front cover.

Pull the upper part of the front cover to open.

2. Take out the filter and remove the plastic packaging.

Remove the plastic packaging from filters, excluding the pre-filter, and assemble them in the purifier in order.


Filter assembly order : HEPA filter →
 Deodorizing filter → Pre-filter


3. Reattach the front cover.

Fit the two tabs on the bottom part of the front cover into their slots and push to install.

* If the front cover is not properly attached, the product will not operate.












INDICATORS AND BUTTONS

Indicators

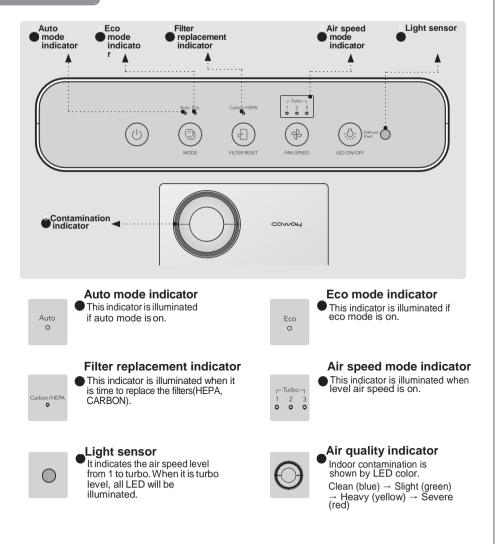

Power button 2 Mode button

Filter reset Air speed button 5 Mood/lock button

How to

Power button

Use when turning the purifier on and off.

The purifier begins operating in auto mode the first time, and if it is turned off and on again while in operation. runs in the mode it was in before it stopped.

Filter reset button

Pressing 3 seconds resets the filter change interval.

Mode button

Press the mode button to go from Auto \rightarrow Ecomode.

Air speed button

Press the air speed button to cycle air speed between $1 \rightarrow 2 \rightarrow 3 \rightarrow Turbo$

Mood/lock button

Turns the air quality indicator on or off. Press once to turn off the air quality indicator, press again to turn off all indicators, and pressone more time to turn all indicators on.

Press and hold the lock button for 3 seconds to lock all buttons, and press and hold for another 3 seconds to unlock.

HOW TO USE

Plug the power plug into a socket before operating the purifier.
 When the purifier is turned on, it starts in auto mode by default.

•

•

To operate manually

Tips

Press the power button to turn on the purifier, and press the air speed button to choose your desired air speed.

 $(1 \rightarrow 2 \rightarrow 3 \rightarrow \text{Turbo})$

 Press the air speed button while operating automatically (Auto / Eco) to immediately convert to manual operation.

To operate automatically

Press the power button to turn on the purifier and press the mode button to select your desired operating

mode. (Auto \rightarrow Eco)

Auto mode

Operates effectively by automatically adjusting the air speed (auto level 1 \rightarrow auto level 2 \rightarrow auto level 3) depending on the indoor pollution level detected by the sensor. This is a convenient operating mode for most users.

	Pollution level 1	Pollution level 2	Pollution level 3, 4
Air speed	Auto level 1	Auto level 2	Auto level 3

* The air speed indicator is off during auto mode.

Eco mode

Α

Enters standby mode when the air stays clean for at least 10 minutes.

ADJUST PARTICLE SENSOR

How to adjust the sensitivity of the pollution s


When you first turn on the purifier, the air quality sensor is set to standard. You can adjust the sensitivity as follows if the air quality LED stays at severe even after the purifier runs for 2 hours or more with high pollution or the air quality LED stays at clean even if the pollution is high.

- 1. Press and hold the air speed button and mode button simultaneously for about 1 second while the purifier is running.
- 2. The air speed mode indicator flashes at intervals of about 0.5 seconds.

3. Press the air speed button to adjust to your desired sensor sensitivity. When sensor sensitivity is selected, the air speed mode indicator flashes as follows.


1	2	3
Sensitiv	Standar	Insensitiv
е	d	е

- 4. Press the air speed and mode buttons simultaneously for at least 3 seconds again to enter your selected sensitivity to operate the purifier normally.
 - If the air speed button and mode button are not pressed for 10 seconds after selecting sensitivity, the selected sensitivity is automatically input.









13 14

CLEANING METHOD

- Always unplug the power before cleaning.

- Do not use detergents containing organic solvents (solvents, thinners,
- etc.), bleach, chlorine, or abrasives to clean.
- Do not immerse the purifier in water or sprinkle water on it.

Cleaning the vent and detachable vent grille

Lift the detachable vent grille on top of the vent, then clean the grill and vent with a soft brush or vacuum cleaner

* Be careful not to let dust enter the vent while cleaning.



months)

- 1. Clean the air quality sensor air inlet and vent with a soft brush or vacuum cleaner.
 - * Take care that dust does not fall inside the purifier while cleaning.
- 2. Open the air quality sensor cover on the upper rear of the purifier. (Use the slots on the air quality sensor cover to open it.)

Wet a cotton ball with a small amount of water and wipe the lens, dust inlet, and outlet, then wipe again with a dry cotton ball to remove moisture.

- * If cleaning is not done regularly, the air quality sensor may not work as well.
- * Clean more often in verv dustv environments.

Cleaning the front cover

Remove the front cover from the purifier and then wipe away dust

stuck to the surface with a soft, dry cloth or soft brush.


* If there is severe contamination, use a damp cloth (do not use abrasives).


Cleaning the purifier


Wipe with a soft, dry cloth.


* If there is severe contamination, use a damp cloth (do not use abrasives).

















CLEANING



Pre-filter (clean every 2-4 weeks)

1. Pull the upper part of the front cover to open.

* Be careful that dust doesn't fall out during removal.

- Always unplug the power before cleaning the filters.

may decrease and problems may occur.


cleaning. Never clean them with water.


- The pre-filter can be reused after removing dust and cleaning with water. - If the pre-filter is not cleaned for a long time, the product performance


- The tailored filter, deodorizing filter and HEPA filter cannot be reused after

- 3. Remove dust with water or a vacuum cleaner depending on the degree of contamination
 - * Be careful not to let dust enter the purifier while cleaning.


4. Push the completely dry pre-filter all the way into the purifier to install it. Close the front cover again.














FILTER REPLACEMENT

How to replace

- Refer to the filter installation method specified on page 10 to replace the filters.
- During filter assembly, be sure to check the front.
- Only use genuine Coway filters to keep the purifier at its optimal performance.
- Always unplug the power plug before replacing filters.

Filter cleaning and replacement cycle

Filter	Cleaning / replacement time	Cleaning / replacement
Pre-filter	Once / 2-4 weeks	Clean and wash
Deodorization filter	Once / 12 months	Replace
HEPA filter	Once / 12 months	Replace


* Based on 24 hour (1 day) use at low air speed


* The filter replacement cycle is the recommended cycle and may vary depending on usage environment.


FILTER

■ How to replace deodorizing/HEPA filters (replace every 12 months)


1. Open the front cover and remove the pre-filter from the purifier, then take out the deodorizing filter and HEPA filter.







- 2. Replace them with a new deodorizing filter and new HEPA filter with the plastic packaging removed. Reassemble the purifier in the reverse order you disassembled it and close the front cover.
 - * Check the filters' front display.







TROUBLE SHOOTING

The product may not operate correctly due to trivial reasons or inexperienced usage, although these are not product malfunctions. In such cases, the problem can be solved easily without the help of a service center if the following items are checked. If the problem is not resolved even after checking the following, please contact a service center.

Problem	Chec k	Possible Solutions
	• Is the power plugged in?	Plug the power cord into a 220 V - 50 Hz
There is no breeze.	• Is the entire display off?	socket. Press the power button, then select your
	•Is there a power failure?	desired feature. After the power comes back on, use the purifier.
Air speed doesn't change.	• Is the automatic indicator off?	You can only select air speed in manual
	• Is the silent indicator off?	mode (normal). You can only select air speed in manual mode (normal).
Air speed is very low.	• Is it past time for filter cleaning and replacement?	Check your filter cleaning and replacement cycle and clean or replace filters.
Dellarian haad	Is there dust on the air quality sensor lens ?	Clean the air quality sensor lens (p. 15).
Pollution level doesn't change.	Does the pollution level continuously appear high?	Set your pollution sensitivity to insensitive or standard (p. 14).
	Does the pollution level continuously	Set your pollution sensitivity to sensitive
There's a smell from the vent.	appear low?Is it past time for filter cleaning and replacement?	or standard (p. 14). Check your filter cleaning and replacement cycle and clean or replace filters.
The air quality indicator flashes.	Request service.	
If other functional flaws occur	Check the problem, then unplug the power and request service.	

PRODUCT SPECIFICATION

Product name	Air purifier
Model name	AP-1018F
Rated voltage	Refer to the rating plate
Phase	Single-phase
Power consumption	38 W
Product insulation grade	Class 2 devic
Dust collection method	Mechanical dust intake (HEPA filter)
Safety equipment	Power blocked during door opening/closing
Installation location	Indoors
Recommended area for use	33 m ²
Product size	376 mm (width) x 183 mm (depth) x 641 mm (height)
Net weight	7.25 kg

Specifications may vary slightly without prior notice to improve product performance.

WARRANTY CARD OR WARRANTY LETTER ONE YEAR LIMITED WARRANTY AIR PURTFIER AP-1018F ("PRODUCT")

Model: Serial Number: Customer Name: Date of Purchase:

("OWNER")

What This Warranty Covers:

Commencing with the date of purchase of the Product and continuing for a period of one year, if manufacturing defects in the Product cause the Product to not operate properly for its intended

use, then subject to the exclusions, conditions, and limitations contained herein, COWAY at its sole option will repair or replace the Product.

Decisions as to the extent of repair or replacement required will be made solely by COWAY.

The remedy under this Warranty is available only for that portion of the Product exhibiting defects at the time of the warranty claim. The replacement Product as well as any remaining original Product will be warranted only for the original one year warranty period. This limited warranty applies only to Product used for an application specified by COWAY for the Product and applied in strict accordance with COWAY published specifications in effect at the time of application. IF PRODUCT IS USED FOR OTHER THAN ITS INTENDED PURPOSE, IT IS SOLD AS IS AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

What This Warranty Does Not Cover:

This Warranty warrants that the Product will be free from manufacturing defects which affect the ability of the Product to operate for its intended use; it is not a warranty that the Product will never require repairs or to undertake responsibilities, liabilities or obligations other than those specifically identified in the preceding section.

COWAY is not responsible or liable for personal injury or property damage of any kind, even if arising from a breach of this— Warranty.

Limitations and Exclusions:

TO THE EXTENT PERMITTED BY APPLICABLE LAW, COWAY DISCLAIMS ANY OTHER WARRANTY EXPRESS OR IMPLIED, THAN THAT PROVIDED FOR HEREIN. THIS WARRANTY IS IN LIEU OF AND

EXCLUDES ALL OTHER WARRANTIES. GUARANTEES, CONDITIONS AND REPRESENTATIONS, EXPRESS OR IMPLIED, ORAL OR WRITTEN. STATUTORY OR OTHERWISE. INCLUDING BUT NOT LIMITED TO ANY IMPLIED CONDITIONS OR WARRANTIES AS TO THE MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE COWAY PRODUCT, SOME STATES DO NOT ALLOW LIMITATIONS ON HOW I ONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU, COWAY DOES NOT AUTHORIZE ANY PERSON INCLUDING ITS REPRESENTATIVES, TO MAKE ANY REPRESENTATION OR TO OFFER ANY WARRANTY, CONDITION OR GUARANTY IN RESPECT OF THE PRODUCT OTHER THAN THIS WARRANTY. THIS LIMITED WARRANTY SHALL BE THE OWNER'S SOLE AND EXCLUSIVE REMEDY AGAINST

COWAY AND COWAY SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL, EXEMPLARY, SPECIAL, INCIDENTAL OR OTHER DAMAGES INCLUDING, BUT NOT LIMITED TO, LOSS OF PROFITS, AND LOSS OF USE. INCIDENTAL, CONSEQUENTIAL AND EXEMPLARY DAMAGES SHALL NOT BE RECOVERABLE EVEN IF THE REMEDIES OR THE ACTIONS PROVIDED FOR IN THIS WARRANTY FAIL OF THEIR ESSENTIAL PURPOSE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. COWAY SHALL NOT BE LIABLE FOR ANY DAMAGES WHICH ARE BASED UPON NEGLIGENCE, BREACH OF WARRANTY, STRICT LIABILITY OR ANY OTHER LEGAL THEORY OF LIABILITY OTHER THAN THE EXCLUSIVE LIABILITY SET FORTH IN THIS WARRANTY.

WARRANTY

Limitations on Implied Warranties:

Any implied warranty of merchantability or fitness for a particular purpose or use, shall be limited to the duration of the foregoing express written warranty.

Conditions of Warranty:

COWAY's continuing liability under this Warranty is conditioned upon the following:

- a) The defect or damage is not caused by or is the result of: abnormal use or conditions; improper storage, unauthorized modifications or repair; misuse, neglect, accident, alteration, improper installation or other acts that are not the fault of Coway or the manufacturer of the product or that are not covered by the manufacturer's warranty;
- b) The Product has not been altered, modified or repaired without prior written approval of COWAY;
- c) The OWNER has notified COWAY in writing of any failure of the Product covered by this Warranty within thirty (30) days following such failure;
- d) There has been no misuse, abuse or negligence with respect to the Product on the part of the OWNER.

Waiver:

COWAY's failure at any time to enforce or rely upon any of the terms or conditions stated herein shall not be construed to be a waiver of its rights hereunder.

Obtaining Warranty Service and OWNER'S Duties:

If the Product fails to operate for its intended purpose, then notify COWAY or its Representative Agency, within 48 hours or within the next business day after discovery

of any defect in the Product. The OWNER must give written notice to COWAY no later than thirty (30) days after a defect is discovered or should by reasonable diligence have been discovered. Claims under this Warranty will require proof of purchase by the OWNER.

COWAY

Add : Coway co., Ltd. 136-23, Yugumagoksa-ro, Yugu-eup, Gongju-si, Chungcheongnam-do, Korea Tel. :82-41-850-7879 Fax. :82-41-841-7816

SWEDE

Add : Albion Nordic AB Traktorgatan 2 745 37 Enköping Sweden Tel. : +46 171 66 33 00 Mail : info@albionnordic.com

<u>001</u> 9233768

