



**ionmax**

# SELAH UV HEPA AIR PURIFIER ION360

Compact, sleek and stylish, the new **Ionmax Selah ION360 UV HEPA Air Purifier** features five stages of air purification to leave your home's indoor air fresh and free of pollutants. Among its many features, the Ionmax Selah includes a UV-C light that inactivates 99% of microbes such as viruses and bacteria, and a HEPA filter that traps 95% of allergens down to 0.3 microns in size. With a minimalist touch control panel, 360-degree air sterilisation and sophisticated matte black design, the Ionmax Selah air purifier adds a modern touch to your home while efficiently cleaning the air.

## FEATURES



Suitable for areas up to 15 sqm



Timer up to 8 hours



Low noise level



4 fan speeds



Filter replacement indicator




Built-in ioniser

## 5 LEVELS OF AIR PURIFICATION




### Pre-filter

Traps large particles such as human hair, pet dander and dust particles.

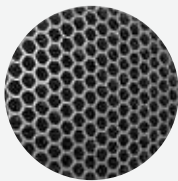

### Activated Carbon Filter

Neutralises odours such as smoke, harmful gases, and Volatile Organic Compounds (VOC's).

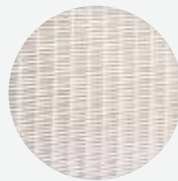


### True HEPA Filter

Removes microscopic particles as small as 0.3 microns in size such as fine dust, smoke, bacteria, pollen, and mould spores.



### UV-C Light

Kills airborne germs, viruses, fungi and bacteria.

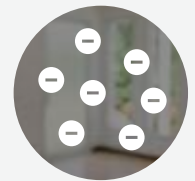

### Ioniser

Releases negative ions to improve indoor air quality.

## SPECIFICATION

<b>Model No.</b>	Ionmax ION360
<b>Coverage Area</b>	15 sqm
<b>Power Consumption</b>	45W
<b>Rated Voltage</b>	220-240V, 50/60Hz

<b>Noise Level</b>	35~55 dB(A)
<b>Net Weight</b>	2.78 kg
<b>Dimension (W x D x H)</b>	202 x 204 x 330 mm
<b>Warranty</b>	1 year