




Philips Series 1000

Reduces allergens, gases, odors
Captures 99.97% of particles
Ideal for small to medium rooms

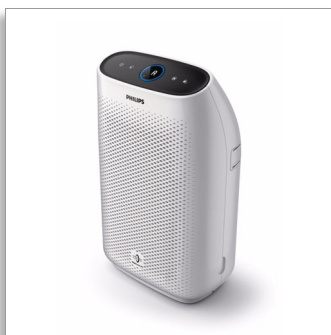

AC1213/40

Intelligent purification

See your air quality with AeraSense

With professional-grade sensing performance, the Philips Air Purifier Series 1000 automatically monitors, reacts and purifies the air – then gives real-time air quality feedback via the numerical display and color ring. Ideal for bedrooms, with quiet night sense auto-mode.

Superior purification

- Captures 99.97% of particles that pass through the filter
- Reduces allergens, gases, odors

Intelligent purification

- Visualized air quality feedback
- 3 auto modes: General, Allergen, and night sense
- 4 manual settings, including turbo speed
- Automatically monitors, reacts & purifies the air

Long-lasting performance

- Ideal for small to medium rooms
- Low energy consumption
- Auto shut-off

PHILIPS

Air Purifier

Reduces allergens, gases, odors Captures 99.97% of particles, Ideal for small to medium rooms

AC1213/40

Highlights

99.97% filtration



Designed with a multi-stage active filtration system, which captures up to 99.97% of particles that pass through the filter as small as 0.3 microns – the size of most common airborne allergens, particles, bacteria and viruses.

AeraSense technology



Benchmarked against a professional-grade sensor, Philips AeraSense technology is highly effective in sensing even the slightest change in indoor air conditions. It continuously monitors the air and automatically adjusts the fan speed when it detects a change in particles.

Visualized air quality

In real-time, AeraSense shows you the air quality data via a numerical display and a color ring on the dashboard of the air purifier. The numerical display from 1-12 is an index of the indoor air quality, where 1 is good and 12 is polluted air. The color ring provides an additional visual cue, ranging from blue (good allergen & particle level) to red (bad allergen & particle level)

3 auto modes



The Philips Air Purifier has 3 automatic purification settings: a General mode, an extra-sensitive Allergen mode, and a night sense mode that automatically turns down the lights and fan speed when the room is dark. You can choose your preferred mode to personalize and optimize your purification.

4 manual settings




In addition to the 3 auto modes, the purifier also has 4 manual modes. Choose one of four different speed settings: from the extra-quiet 'Speed 1' to the extra-powerful 'Turbo Speed' mode. Pick one that is ideal for your required purification.

Ideal for small to medium rooms



The Philip Air Purifier has been designed for small to medium rooms, such as a bedroom. It is recommended for rooms up to 200 sq ft.

Low energy consumption

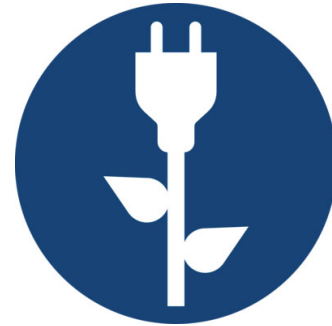

This purifier is Energy Star-certified.

Auto shut-off



To protect your air quality, the purifier warns you in advance when the filters are wearing out and then shuts down the appliance automatically in the event of an exhausted filter.

Specifications

Performance

- Room size: 200 sq ft/ 18.85 m²
- 0.3µm particle removal: 99.97 %
- Ultra fine particle removal: 20 nm
- Recommended HEPA life time: 12 months
- Recommended AC life time: 6 months
- Sound Power: 32 - 62 dB(A)

Features

- VitaShield IPS
- AeraSense technology
- PM2.5 sensor
- Modes: 3 auto modes
- Fan speed: 4 manual speed settings
- Child lock
- Healthy air lock & Alert
- Timer: 12 hour(s)
- Motor: DC

Design and finishing

- Color(s): White
- Color of control panel: Black 7C
- Control panel type: Touch Panel
- Material of main body: ABS

Technical specifications

- Voltage: 120 V
- Frequency: 50/60 Hz
- Cord length: 1.8 m

Weight and dimensions

- Weight of product: 183.78Oz/5.21 kg
- Weight incl. packaging: 234.22Oz/6.64 kg
- Dimension of product (LxWxH): 8.27x12.80x21.38 inch /210 x 325 x 543 mm
- Dimension of packaging (LxWxH): 10.12x14.61x23.74 inch /257x371x603 mm

Country of origin

- Made in: China

Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

Service

- 2-year guarantee



Issue date 2018-09-24

Version: 9.2.1

EAN: 00 07502 00652 23

© 2018 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com